

APPLICATION

Our intelligent PEUX dispenser is developed for improved efficiency and to reach order when storing the "line leaders". In such a way one does not need to open any longer the dispenser to reload the coils. The individual coils can be loaded simply from the outside with the included special tool. Each individual coil presents an indicator, which signs that the coil is full. Therefore overfilling not possible.

LOADING THE COILS

- 1- Lift the automatic brake (with the aid of a needle or paperclip) to ensure that the spool is not hampered. (Illustration 1)
- 2- Align the hole of the spool in line with the entrance hole. (Illustration 2)
- 3- With the aid of a needle pass the line through the holes. (Illustration 2)
- 4- Tie a knot, so that the line cannot slip back any longer. (Illustration 2-a)
- 5- Fit now the provided load key into the desired spool. (Illustration 3)
- 6- To load, turn the spool in direction of the arrow marked on the Dispenser. (Illustration 3)
- 7- Remove the load key & repeat for each spool.


USEFUL TIPS

After having loaded about 15 revolutions you should make a small node into the line. This will remind you in time to reload the coils again.


- 1- Link the end of the remaining line with the new one.
- 2- Lift the automatic brake.
- 3- Fix the load key into the desired spool.
- 4- Turn now the spool into the indicated direction.
- 5- Remove the load key.

We thank you for your trust into our product.


Best regards your PEUX team

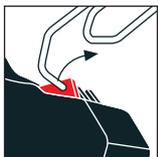

1

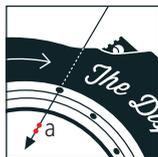

2

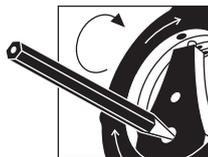

3